



- TYPICAL REMOTE START/STOP PANEL CONNECTIONS -

- NOTES:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
 2. GROUND "1" TERMINAL OF PREHEAT SOLENOID ON 24V SYSTEM ONLY.
 3. ○ REMOTE CONNECTOR PINS.
 4. THE 5K REMOTE SPEED POTENTIOMETER CAN BE WIRED TWO DIFFERENT WAYS:
 1. AS SHOWN BY THE SOLID LINE FROM THE WIPER OF THE 5K POTENTIOMETER AND THEN CONNECTED TO TERMINAL 9 (NO RESISTOR REQUIRED). ADJUSTABLE RANGE IS APPROXIMATELY ±5% AT 1800 RPM.
 2. AS SHOWN BY THE DASHED LINE FROM THE WIPER OF THE 5K POTENTIOMETER THROUGH RESISTOR "R" AND THEN CONNECTED TO TERMINAL 8. REDUCING THE VALUE OF "R" INCREASES THE REMOTE ADJUSTABLE SPEED RANGE.

TOLERANCES (UNLESS OTHERWISE NOTED)		WESTERBEKE CORPORATION TAUNTON, MA. 02780	
INCHES	MILLIMETERS	TITLE	
∅ .010	∅ .254	WIRING DIAGRAM/SCHEMATIC	
∅ .015	∅ .381	MARINE GENERATOR - PARALLEL	
∅ .020	∅ .508	DRAWN BY	DATE
∅ .030	∅ .762	Jeffery Anderson	26/Mar/03
∅ .040	∅ 1.016	APPROVED BY	DATE
∅ .050	∅ 1.270		
∅ .060	∅ 1.524	DRAWING NUMBER	REV.
∅ .070	∅ 1.778	E	48350
∅ .080	∅ 2.032	Sht. 1 of 1	