



-TYPICAL REMOTE START/STOP PANEL CONNECTIONS-

- NOTES:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
 2. GROUND "1" TERMINAL OF PREHEAT SOLENOID ON 24V SYSTEM ONLY.
 3. ○ REMOTE CONNECTOR PINS.
 4. THE 5K REMOTE SPEED POTENTIOMETER CAN BE WIRED TWO DIFFERENT WAYS:
 1. AS SHOWN BY THE SOLID LINE FROM THE WIPER OF THE 5K POTENTIOMETER AND THEN CONNECTED TO TERMINAL 9 (NO RESISTOR REQUIRED). ADJUSTABLE RANGE IS APPROXIMATELY ±5% AT 1800 RPM.
 2. AS SHOWN BY THE DASHED LINE FROM THE WIPER OF THE 5K POTENTIOMETER THROUGH RESISTOR "R" AND THEN CONNECTED TO TERMINAL 8, REDUCING THE VALUE OF "R" INCREASES THE REMOTE ADJUSTIBLE SPEED RANGE.
 5. JUMPER SETTING:
 - J1 OPEN - 50HZ
 - J2 CLOSE - 60HZ
 - J3 OPEN - 5-15KW
 - J4 CLOSE - 20-95KW

TOLERANCES (UNLESS OTHERWISE NOTED)		WESTERBEKE CORPORATION TAUNTON, MA. 02780	
INCHES	MILLIMETERS	TITLE	
.10	±.02	WIRING DIAGRAM/SCHEMATIC	
.010	±.005	MARINE GENERATOR - PARALLEL	
CASE	±.005	DATE	26/Mar/83
ANGLES	±.05	APPROVED BY	DATE
FINISH	AS	DRAWN BY	DATE
DIMENSIONS		SCALE	SHEET NUMBER
INCHES		NONE	E 48350
(WHEN APPLICABLE)		Sht. 1 of 1	REV.