



- NOTES:
1. THIS PRODUCT IS PROTECTED BY A MANUAL RESET CIRCUIT BREAKER LOCATED NEAR THE STARTER. EXCESSIVE CURRENT WILL CAUSE THE BREAKER TO TRIP AND THE ENGINE WILL SHUT DOWN. THE BUILDER/OWNER MUST BE SURE THAT THE INSTRUMENT PANEL, WIRING, AND ENGINE ARE INSTALLED TO PREVENT CONTACT BETWEEN ELECTRICAL DEVICES AND SEAWATER.
 2. AN ON-OFF SWITCH SHOULD BE INSTALLED BETWEEN THE BATTERY AND STARTER TO DISCONNECT THE BATTERY IN AN EMERGENCY AND WHEN LEAVING THE BOAT. A SWITCH WITH A CONTINUOUS RATING OF 175 AMPS. AT 12 VDC WILL SERVE THIS FUNCTION. THIS SWITCH SHOULD NOT BE USED TO MAKE OR BREAK THE CIRCUIT.

TOLERANCES UNLESS OTHERWISE NOTED	WESTERBEKE CORPORATION AVON MA. 02322		
INCHES FRACTIONS DECIMALS MILLIMETERS	TITLE WIRING DIAGRAM/SCHEMATIC 7A-1, PROPULSION ENGINE		
DIMENSIONS INCHES MILLIMETERS	APPROVED BY DATE	DATE DRAWN NUMBER	REVISIONS
SCALE NONE	DATE REV. 1	NO. E	45593