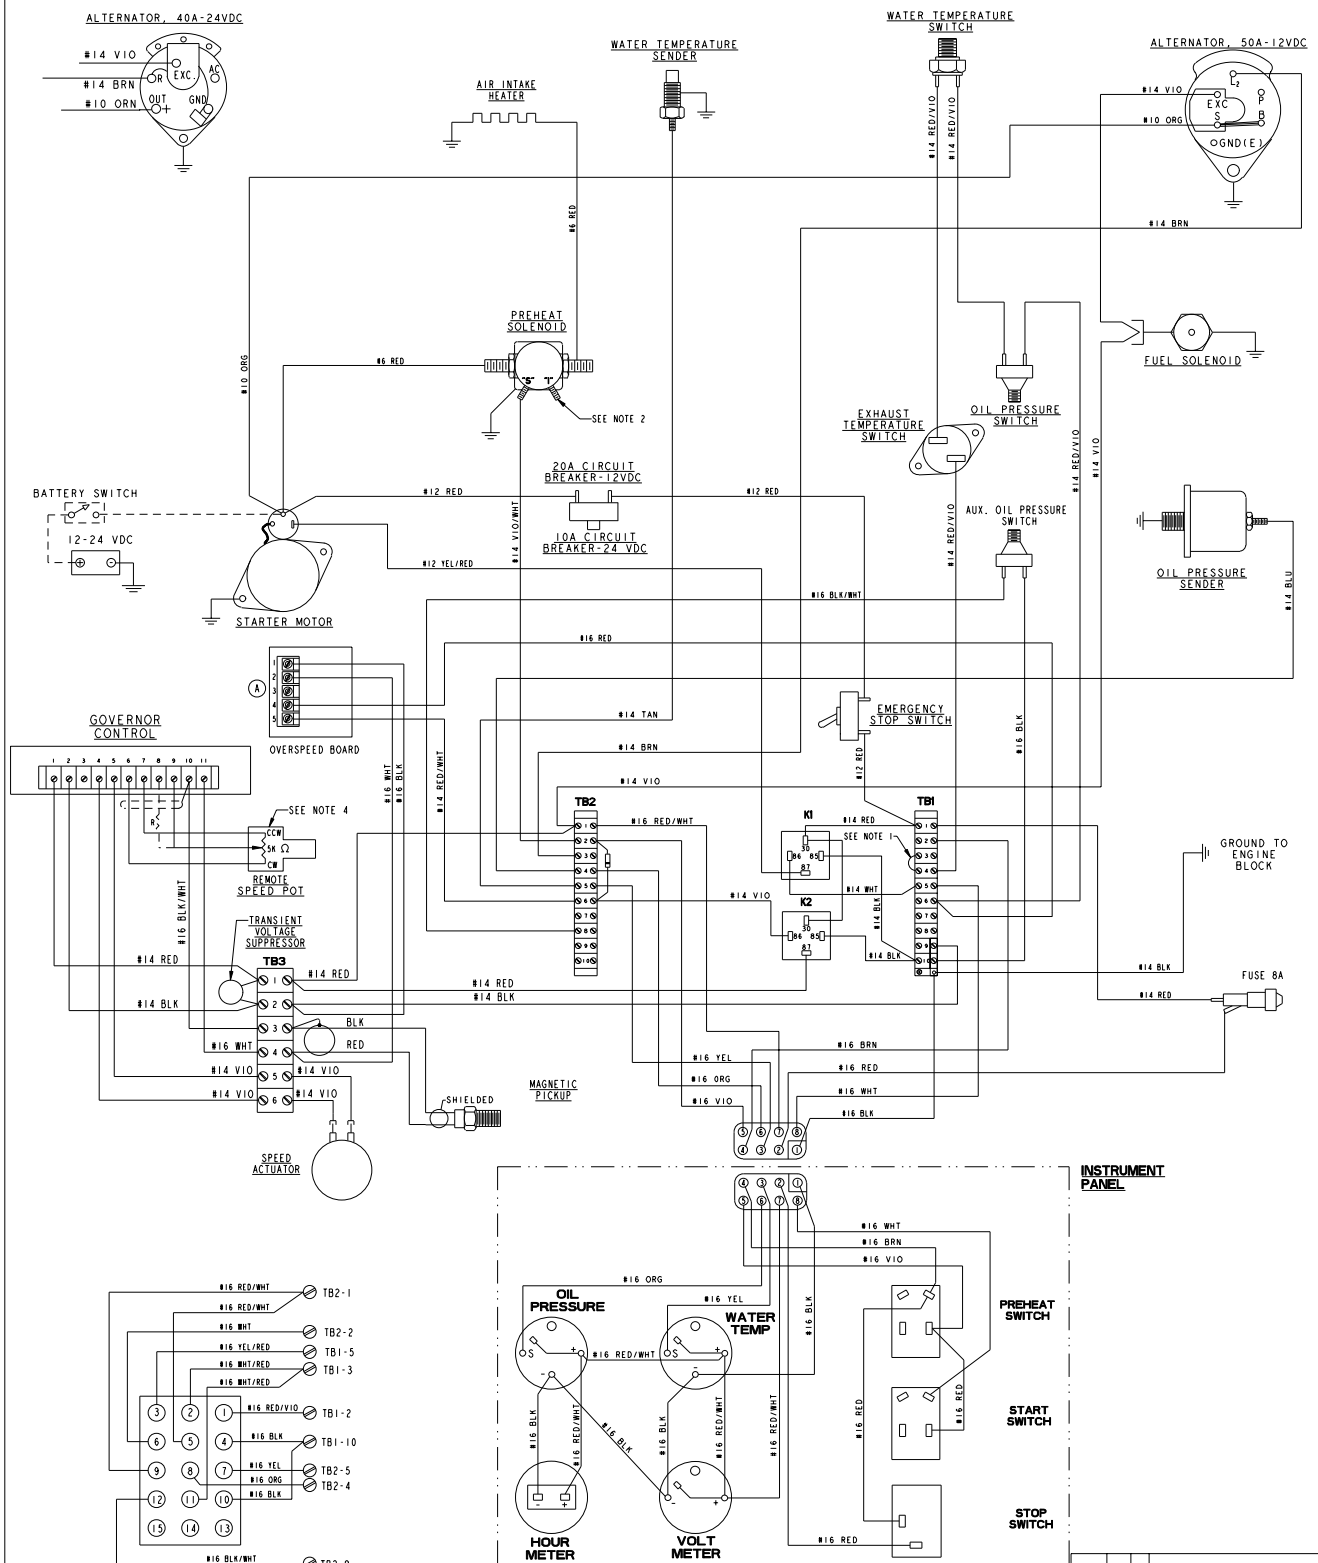

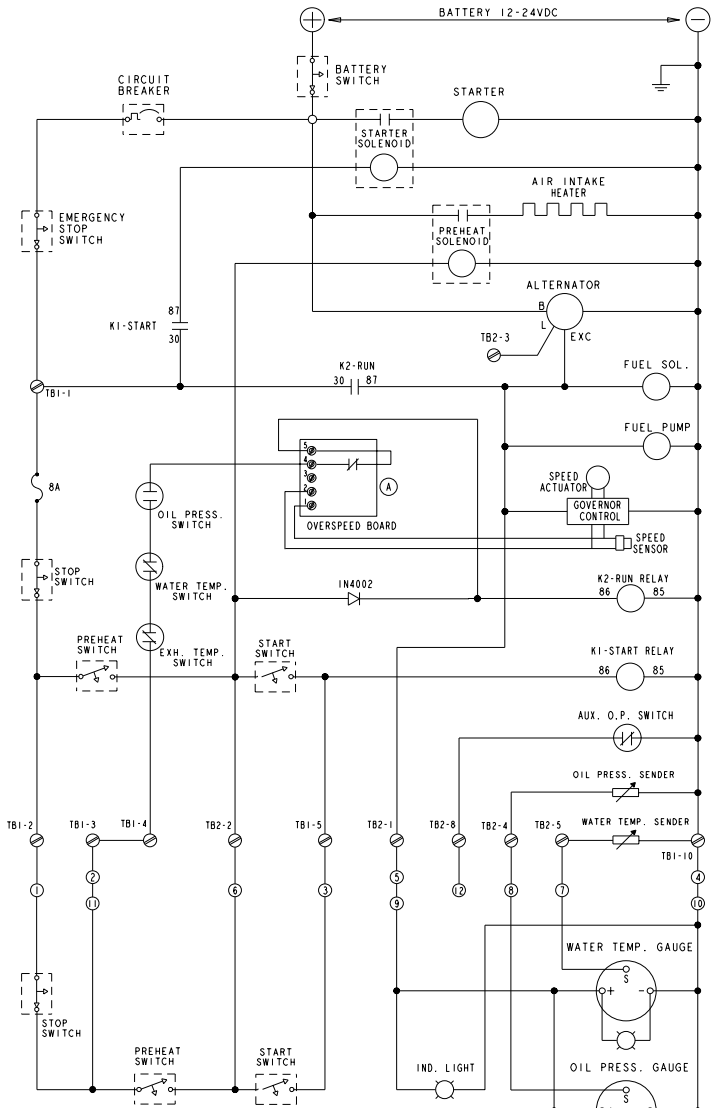

-TYPICAL REMOTE START/STOP PANEL CONECTIONS-

NOTE:

REMOTE CONECTOR PINS

NOTES:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
2. GROUND "I" TERMINAL OF PREHEAT SOLENOID ON 24V SYSTEM ONLY.
3. ◯ REMOTE CONNECTOR PINS.
4. THE 5K REMOTE SPEED POTENTIOMETER CAN BE WIRED TWO DIFFERENT WAYS:
   1. AS SHOWN BY THE SOLID LINE FROM THE WIPER OF THE 5K POTENTIOMETER AND THEN CONNECTED TO TERMINAL 9 (NO RESISTOR REQUIRED). ADJUSTIBLE RANGE IS APPROXIMATELY ±5% AT 1800 RPM.
   2. AS SHOWN BY THE DASHED LINE FROM THE WIPER OF THE 5K POTENTIOMETER THROUGH RESISTOR "R" AND THEN CONNECTED TO TERMINAL 8. REDUCING THE VALUE OF "R" INCREASES THE REMOTE ADJUSTIBLE SPEED RANGE.

ECO NO.	DATE	REV.	REVISION RECORD	AUTH.	DR.BY
5683	7-25-2002	A	ADDED OVERSPEED BOARD		GA

TOLERANCES (UNLESS OTHERWISE NOTED)
INCHES: XX ±.02, XXX ±.005, FRACT ±1/32, ANGLES ±1°
MILLIMETERS: X ±1, XX ±.5
DIMENSIONS: INCHES / MILLIMETERS (WHEN APPLICABLE)

WESTERBEKE CORPORATION
AVON MA. 02322

TITLE: WIRING DIAGRAM/SCHEMATIC, 32.0 BEDA - SRC, PARALLELED

DRAWN BY	DATE	MATERIAL
TSM	30/OCT/01	
APPROVED BY	DATE	

SCALE NONE | SHT. 1 OF 1 | SIZE E | DRAWING NUMBER 46753 | REV. A