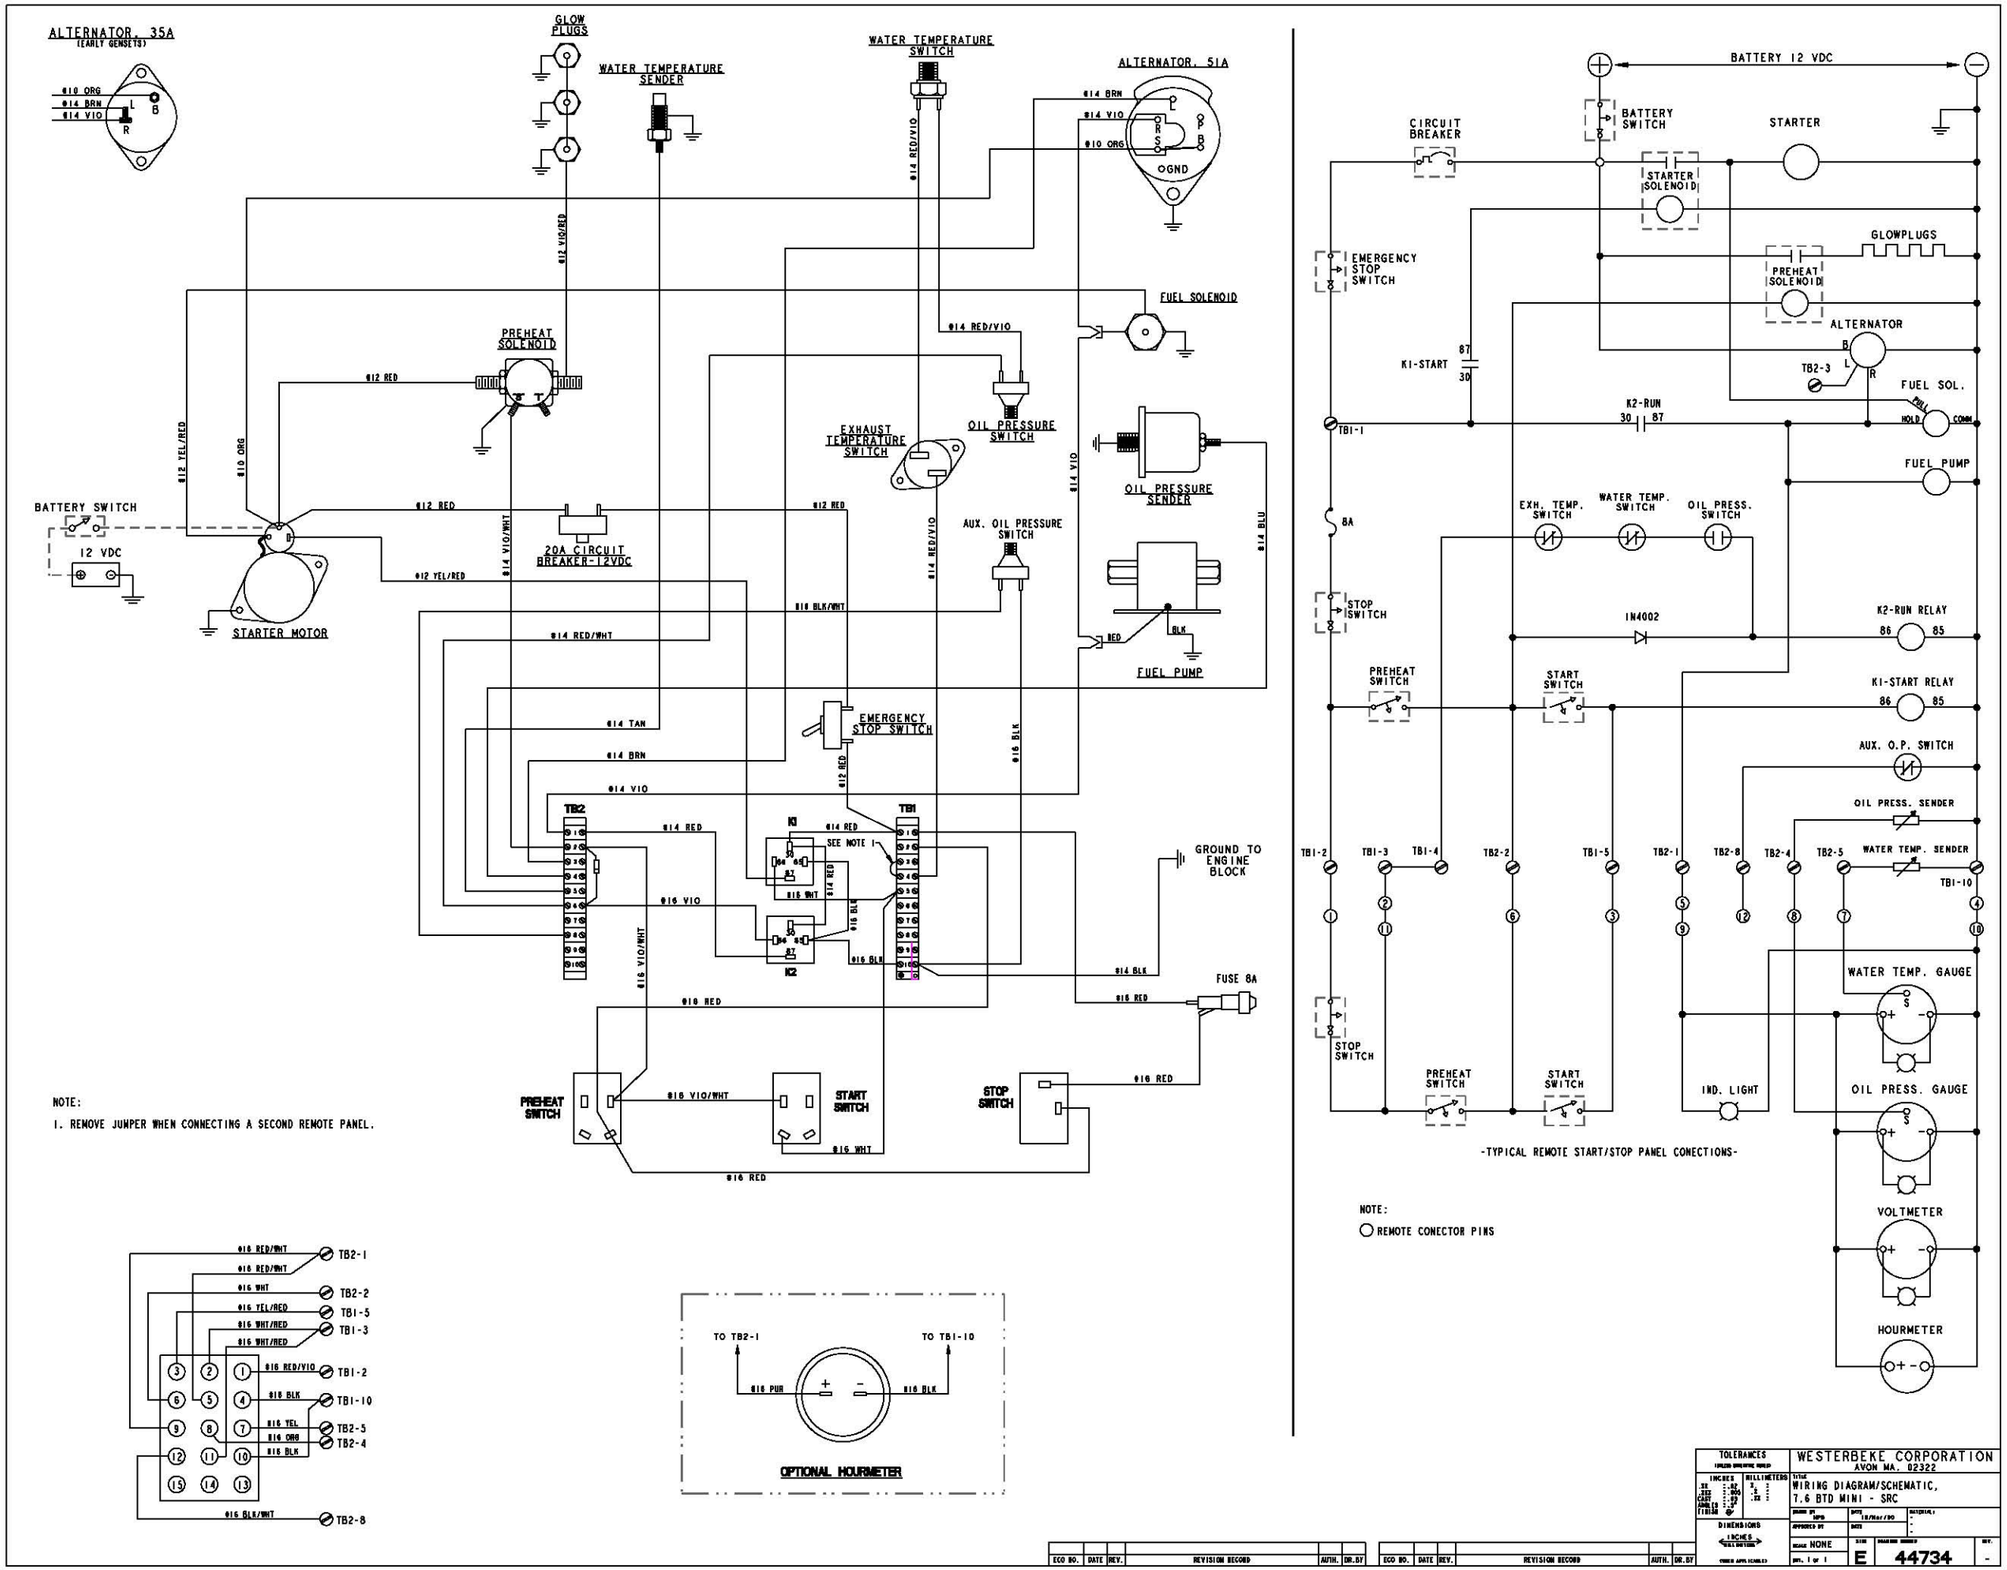
ALTERNATOR, 35A
(EARLY GENSETS)
GLOW PLUGS
WATER TEMPERATURE SENDER
WATER TEMPERATURE SWITCH
ALTERNATOR, 51A
FUEL SOLENOID
PREHEAT SOLENOID
EXHAUST TEMPERATURE SWITCH
OIL PRESSURE SWITCH
OIL PRESSURE SENDER
BATTERY SWITCH
12 VDC
STARTER MOTOR
20A CIRCUIT BREAKER-12VDC
AUX. OIL PRESSURE SWITCH
FUEL PUMP
EMERGENCY STOP SWITCH
TB2
TB1
K1
K2
SEE NOTE 1
GROUND TO ENGINE BLOCK
FUSE 8A
PREHEAT SWITCH
START SWITCH
STOP SWITCH
NOTE:
1. REMOVE JUMPER WHEN CONNECTING A SECOND REMOTE PANEL.
TB2-1
TB2-2
TB1-5
TB1-3
TB1-2
TB1-10
TB2-5
TB2-4
TB2-8
TO TB2-1
TO TB1-10
OPTIONAL HOURMETER
BATTERY 12 VDC
CIRCUIT BREAKER
BATTERY SWITCH
STARTER
STARTER SOLENOID
GLOWPLUGS
PREHEAT SOLENOID
ALTERNATOR
EMERGENCY STOP SWITCH
K1-START
K2-RUN
FUEL SOL.
FUEL PUMP
EXH. TEMP. SWITCH
WATER TEMP. SWITCH
OIL PRESS. SWITCH
STOP SWITCH
1N4002
K2-RUN RELAY
K1-START RELAY
AUX. O.P. SWITCH
OIL PRESS. SENDER
WATER TEMP. SENDER
WATER TEMP. GAUGE
OIL PRESS. GAUGE
IND. LIGHT
VOLTMETER
HOURMETER
-TYPICAL REMOTE START/STOP PANEL CONECTIONS-
NOTE:
REMOTE CONECTOR PINS
TOLERANCES
WESTERBEKE CORPORATION
AVON MA. 02322
WIRING DIAGRAM/SCHEMATIC,
7.6 BTD MINI - SRC
NONE
E
44734
REVISION RECORD