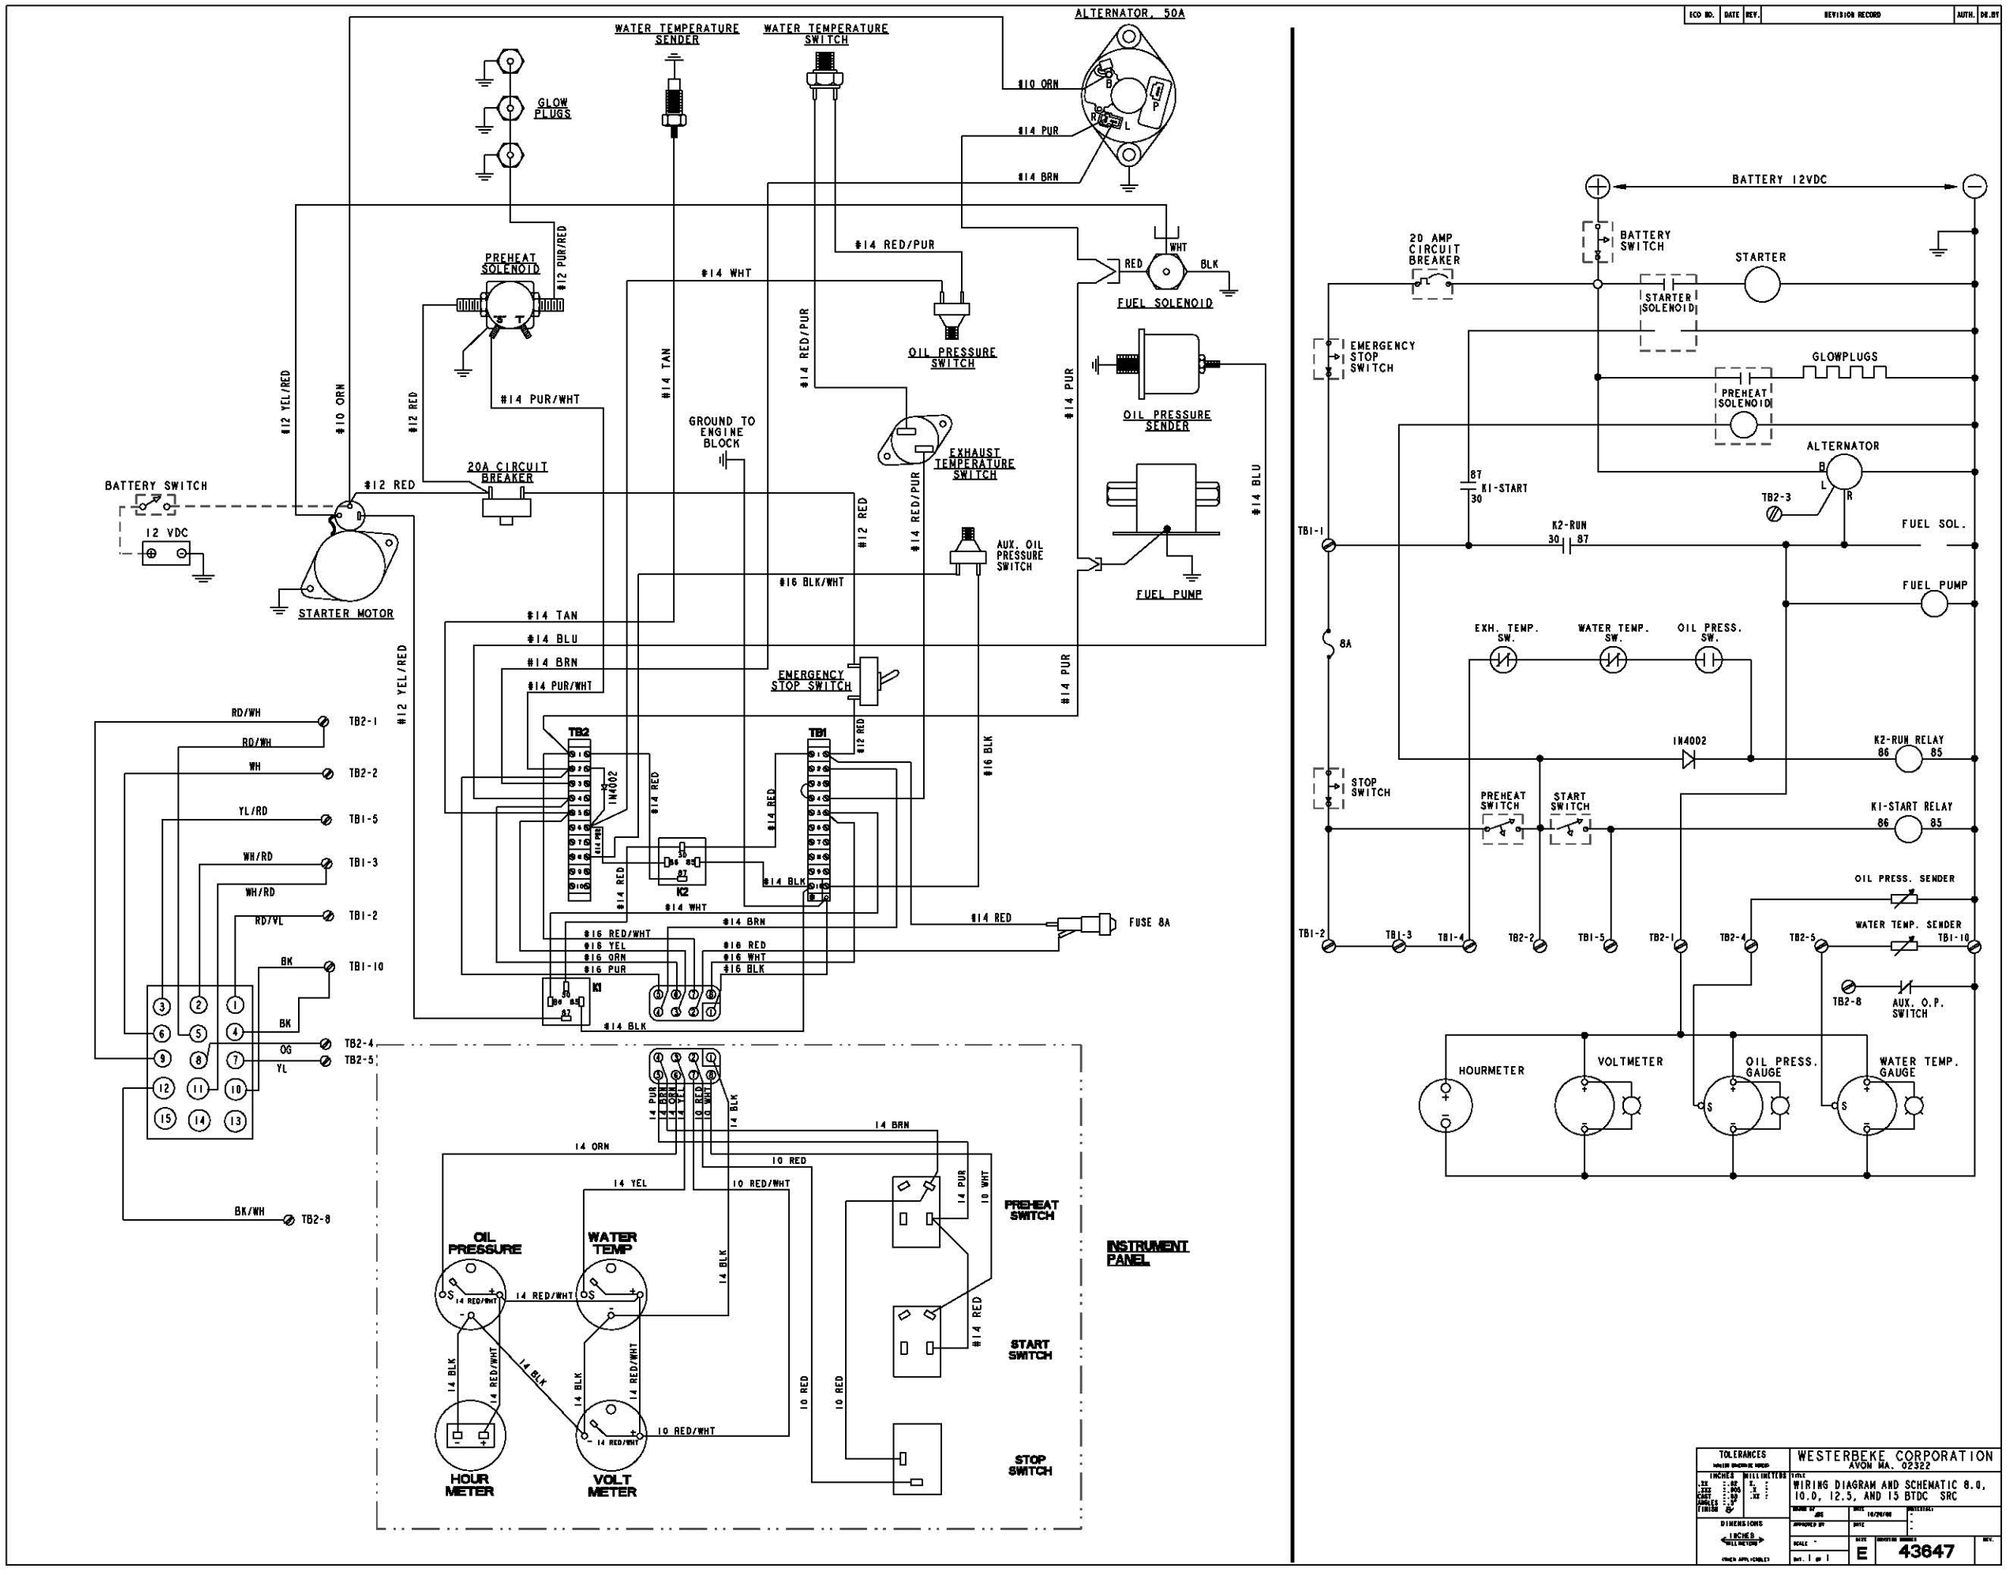

ECO NO.
DATE
REV.
REVISION RECORD
AUTH.
DR.BY
ALTERNATOR, 50A
WATER TEMPERATURE SENDER
WATER TEMPERATURE SWITCH
GLOW PLUGS
#10 ORN
#14 PUR
#14 BRN
PREHEAT SOLENOID
#12 PUR/RED
#14 RED/PUR
#14 WHT
FUEL SOLENOID
WHT
RED
BLK
OIL PRESSURE SWITCH
OIL PRESSURE SENDER
#12 YEL/RED
#10 ORN
#12 RED
#14 PUR/WHT
#14 TAN
#14 RED/PUR
#14 PUR
GROUND TO ENGINE BLOCK
EXHAUST TEMPERATURE SWITCH
20A CIRCUIT BREAKER
BATTERY SWITCH
12 VDC
#12 RED
STARTER MOTOR
#12 RED
#14 RED/PUR
AUX. OIL PRESSURE SWITCH
#14 BLU
FUEL PUMP
#16 BLK/WHT
#14 TAN
#14 BLU
#14 BRN
#14 PUR/WHT
EMERGENCY STOP SWITCH
#14 PUR
#12 YEL/RED
RD/WH
TB2-1
RD/WH
WH
TB2-2
YL/RD
TB1-5
WH/RD
TB1-3
WH/RD
RD/VL
TB1-2
BK
TB1-10
BK
OG
TB2-4
YL
TB2-5
BK/WH
TB2-8
TB2
TB1
1N4002
#14 RED
#14 RED
#16 BLK
K2
#14 BLK
#14 WHT
#14 BRN
#14 RED
FUSE 8A
#16 RED/WHT
#16 YEL
#16 ORN
#16 PUR
#16 RED
#16 WHT
#16 BLK
K1
#14 BLK
14 PUR
14 BRN
14 ORN
14 YEL
10 RED
10 WHT
14 BLK
14 BRN
14 ORN
10 RED
14 YEL
10 RED/WHT
14 PUR
10 WHT
PREHEAT SWITCH
OIL PRESSURE
WATER TEMP
14 RED/WHT
14 BLK
14 RED/WHT
14 BLK
14 BLK
14 RED/WHT
14 BLK
14 RED/WHT
10 RED/WHT
10 RED
10 RED
#14 RED
START SWITCH
HOUR METER
VOLT METER
STOP SWITCH
INSTRUMENT PANEL
BATTERY 12VDC
20 AMP CIRCUIT BREAKER
BATTERY SWITCH
STARTER
STARTER SOLENOID
EMERGENCY STOP SWITCH
GLOWPLUGS
PREHEAT SOLENOID
ALTERNATOR
87
K1-START
30
TB2-3
TB1-1
K2-RUN
30
87
FUEL SOL.
FUEL PUMP
8A
EXH. TEMP. SW.
WATER TEMP. SW.
OIL PRESS. SW.
1N4002
K2-RUN RELAY
86
85
STOP SWITCH
PREHEAT SWITCH
START SWITCH
K1-START RELAY
86
85
OIL PRESS. SENDER
WATER TEMP. SENDER
TB1-2
TB1-3
TB1-4
TB2-2
TB1-5
TB2-1
TB2-4
TB2-5
TB1-10
TB2-8
AUX. O.P. SWITCH
HOURMETER
VOLTMETER
OIL PRESS. GAUGE
WATER TEMP. GAUGE
TOLERANCES
WESTERBEKE CORPORATION
AVON MA. 02322
TITLE
WIRING DIAGRAM AND SCHEMATIC 8.0, 10.0, 12.5, AND 15 BTDC SRC
DIMENSIONS
INCHES
MILLIMETERS
E
43647